


# Philips MasterColor® Ceramic Metal Halide 70 Watt 3000K Tubular Single-Ended T4 Lamps

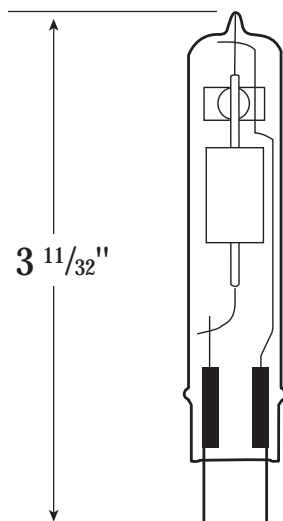


## Ordering Information

Ordering Code	CDM70/TC/830
ANSI Designation	M139/E
Product Number	373738
Description	MasterColor Ceramic Metal Halide
Package Quantity	12

## Physical Characteristics

Bulb Size	T-4
Bulb Finish	Clear
Base	G-8.5 Bi-Pin
Max. Overall Length (MOL)	3.35" (85mm)
Light Center Length (LCL)	2.0" (52mm)
Arc Length	0.28" (7mm)
Arc Tube Material	Polycrystalline Alumina
Max. Permissible Bulb Temp.	550°C (1022°F)
Max. Permissible Base Temp.	300°C (572°F)
Max. Arc Tube to Pinch Eccentricity	3°

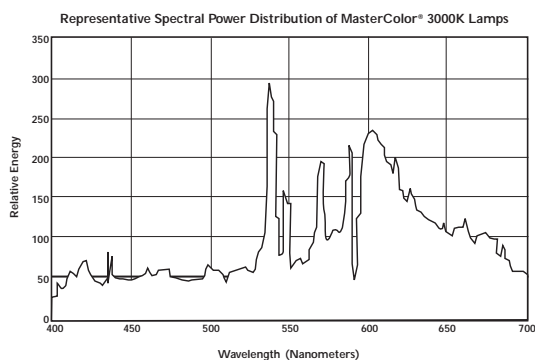

## Operating Characteristics (Photometric)

Rated Initial Lumens <sup>1</sup>	6400
Mean Lumens, Approx. <sup>2</sup>	4500
Rated Average Life, Hours <sup>3</sup>	10,000
Correlated Color Temp. (CCT) <sup>2</sup>	3000K
CIE Chromaticity Approx. <sup>2</sup>	x-.434, y-.398
Color Rendering Index (CRI)	83
Efficacy (lpw)	92

## Operating Position

Universal-Enclosed Luminaires Only

Note: Use on thermally protected electronic ballast only.

# PHILIPS

## Philips MasterColor® Ceramic Metal Halide 70 Watt 3000K Tubular Single-Ended T4 Lamps

### Electrical Data (Subject to change without notice)

Lamp Watts (Nominal) . . . . .	70
Lamp Operating Voltage (rms) (Nominal) <sup>1</sup> . . . . .	83
Initial Lamp Voltage Range (rms) <sup>5</sup> . . . . .	80–100
Lamp Operating Current (Amps) (rms) (Nominal) . . . . .	0.98
Lamp Current Crest Factor (Maximum) . . . . .	1.8
Warm-up Time to 80% of Output . . . . .	3 Minutes
Restrike Time for Hot Lamp. . . . .	4–8 Minutes
Ballast Type (Electronic Only). . . . .	ANSI M139/E
Ballast Open Circuit Voltage (Minimum). . . . .	198 RMS Min.
Pulse Peak Volts . . . . .	3000 Minimum, 4000 Maximum
Pulse Width @ 90% Peak . . . . .	2 Micro Second Minimum
Pulse Repetition Rate (Minimum) <sup>6</sup> . . . . .	1 per Half Cycle
Minimum Operating Temperature . . . . .	-30° C (-22°F)

1) Measured at 100 hrs. life. Approximate lumen values listed are for vertical operation of the lamp.

2) Approximate lumen output at 40% of lamp rated average life.

3) Rated average life is obtained, on the average, from large representative groups of lamps in laboratory tests under controlled conditions at 10 or more operating hours per start. It is based on survival of at least 50% of the lamps and allows for individual lamps or groups of lamps to vary considerably from the average.

4) Measured at rated lamp watts on a linear reactor. LPW does not include ballast losses.

5) Measured with the lamp operating at rated watts.

6) Option-Pulse Width @ 90% Peak, 1 micro second minimum with 2 pulses per half cycle.

**Installation Information:** MasterColor® Metal Halide T4 lamps must be used in combination with appropriate fully electronic ballast.

### Warnings, Cautions and Operating Instructions

**R** **WARNING:** These lamps can cause serious skin burn and eye inflammation from short wave ultraviolet radiation if outer envelope of the lamp is broken or punctured. Do not use where people will remain for more than a few minutes unless adequate shielding or other safety precautions are used. Certain lamps that will automatically extinguish when the outer envelope is broken or punctured are commercially available." This lamp complies with FDA radiation performance standard 21 CFR subchapter J. (USA:21CFR 1040.30 Canada: SOR/DORS/80-381)

**If the outer bulb is broken or punctured, turn off at once and replace the lamp to avoid possible injury from hazardous short wave ultraviolet radiation. Do not scratch the outer bulb or subject it to pressure as this could cause the outer bulb to crack or shatter. A partial vacuum in the outer bulb may cause glass to fly if the envelope is struck.**

**WARNING:** The arc-tube of metal halide lamps is designed to operate under high pressure and at temperatures up to 1000°C and can unexpectedly rupture due to internal or external factors such as a ballast failure or misapplication. If the arc-tube ruptures for any reason, the outer bulb may break and pieces of extremely hot glass might be discharged into the surrounding environment. If such a rupture were to happen, **THERE IS A RISK OF PERSONAL INJURY, PROPERTY DAMAGE, BURNS AND FIRE.**

Certain lamps that will retain all the glass particles should inner arc-tube rupture occur are commercially available from Philips Lighting Company.

**RELAMP FIXTURES AT OR BEFORE THE END OF RATED LIFE.**

**Allowing lamps to operate until they fail is not advised and may increase the possibility of inner arc tube rupture.**

This lamp contains an arc tube with a filling gas containing less than 10 nCi of Kr-85 and is distributed by Philips Lighting Company, a division of Philips Electronics North America Corporation, Somerset, New Jersey 08875-6800.

**CAUTION:** TO REDUCE THE RISK OF PERSONAL INJURY, PROPERTY DAMAGE, BURNS AND FIRE RESULTING FROM AN ARC-TUBE RUPTURE THE FOLLOWING **LAMP OPERATING INSTRUCTIONS** MUST BE FOLLOWED.

### Lamp Operating Instructions:

- 1) **RELAMP FIXTURES AT OR BEFORE THE END OF RATED LIFE.** Allowing lamps to operate until they fail is not advised and may increase the possibility of inner arc tube rupture.
- 2) Use only in fully enclosed fixtures capable of withstanding particles of glass having temperatures up to 1000°C. Lens/diffuser material must be heat resistant. Consult fixture manufacturer regarding the suitability of the fixture for this lamp.
- 3) Do not operate a fixture with a missing or broken lens/diffuser.
- 4) Do not touch lamp with bare hands. If touched with hands, clean lamp with denatured alcohol and wipe with a lint free cloth before installing.
- 5) Operate lamp only within specified limits of operating position.
- 6) Before lamp installation/replacement, shut power off and allow lamp and fixture to cool to avoid electrical shock and potential burn hazards.
- 7) Use only auxiliary equipment meeting Philips and/or ANSI standards. Use within voltage limits recommended by ballast manufacturer.
  - A. Operate lamp only within specified limits of operation.
  - B. The circuit must include an over-current protection device, like a thermo-switched ballast.
  - C. For total supply load refer to ballast manufacturers electrical data.
  - D. Operate CDM-TC lamps (G8.5 base) only on thermally protected electronic ballasts.
  - E. Operate CDM-T lamps (G12 base) 39W/842 lamps only on thermally protected electronic ballasts.
- 8) Periodically inspect the outer envelope. Replace any lamps that show scratches, cracks or damage.
- 9) If a lamp bulb support is used, be sure to insulate the support electrically to avoid possible decomposition of the bulb glass.
- 10) Protect lamp base, socket and wiring against moisture, corrosive atmospheres and excessive heat.
- 11) Time should be allowed for lamps to stabilize in color when turned on for the first time. This may require several hours of operation, with more than one start. Lamp color is also subject to change under conditions of excess vibration or shock, and color appearance may vary between individual lamps.
- 12) Lamps may require 4–8 minutes to re-light if there is a power interruption.
- 13) Take care in handling and disposing of lamps. If an arc tube is broken, avoid skin contact with any of the contents or fragments.

**\*Note:** This "Provisional Data" is subject to change before a permanent "Technical Data Sheet" is issued.

